






RC ROBOTOSAUR

AGES
6+

Congratulations on your purchase of the RC Robotosaur. Your new friend will take you on adventures doing all kinds of amazing things. He will protect your room too! But beware, he can get a bit cranky and tends to roar when he doesn't get his way! Keep this instruction manual, as it contains important information for future reference.

- Read all safety warnings before use.
- Use this product only for its intended purpose.
- This product has no user serviceable components. Do not disassemble.
- Inspect the product before every use. If the product appears damaged in any manner, discontinue use and discard.
- For indoor use only.
- This toy is only to be connected to equipment bearing either of the following symbols:  or .
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit specified by this toy. (Supply unit OUTPUT:DC5V, 0.5-2A).

 Read instruction manual.   Separate supply unit/charger.

Only charge the toy by using provided custom USB cable, custom USB cable INPUT: DC5V, 0.5-2A, OUTPUT:DC 4.2V, 750mA. Do not charge the toy by separate supply unit/charger without using provided custom USB cable.

CONTENTS

NOTE: Images not to scale.



 
ROBOTOSAUR

REMOTE

Charge Port ON/OFF Switch



NOTE: Only use the included USB cable to charge. Make sure it is OFF when charging.

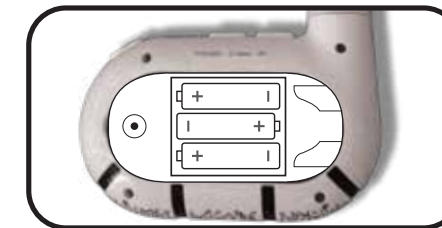

CUSTOM USB CABLE



CHARGING YOUR ROBOTOSAUR

Your Robotosaur has a 3.7v 500 mAh rechargeable internal lithium battery. Although it comes with some charge, you need to charge it 60 minutes before use.

1. Plug the included custom USB cable into the tail port and then to a device (laptop) or adapter for a wall outlet.
2. When the red light on the USB turns off, it is fully charged. Store the USB cord.

REMOTE BATTERY INSTALLATION

1. Unscrew and remove the battery compartment cover.
2. Install 3 "AA" 1.5V batteries (not included) as shown in the diagram to the right.
3. Replace the cover and close battery compartment.


PLAY FEATURES/TROUBLESHOOTING


- Hold the POWER button for 3s to turn off remote.
- When red LED flashes, batteries are low. Please replace the remote batteries for optimal performance.
- If remote is not used for 15 minutes, it will auto shut-off. Press the POWER button again to switch back on.
- When blue LED ring on belly is flashing, Robotosaur's rechargeable battery is low. Please plug in using the included USB charging cable to recharge the battery.
- If Robotosaur is awoken from SLEEP and the remote is still on, the remote will pair automatically with Robotosaur. However, in other disconnection situations, please turn off and on both Robotosaur and the remote to ensure the 2 are paired.
- Robotosaur is shipped in Try-Me mode. To activate full play mode, turn Robotosaur off and back on again.

MAKING YOUR ROBOTOSAUR GO


Press the POWER Button on the remote and slide the tail switch ON. When the blue light on your Robotosaur's belly is on and his eyes are green, the remote is connected and he is ready to play.

 **Waste Electrical and Electronic Equipment (WEEE)**
When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

 The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. If the toy is out of use, please use common household tool to break the product for built-in rechargeable battery operated toy or unscrew the battery door. For replaceable battery operated toy, then take the battery out from the toy. Dispose of battery in accordance with your local battery recycling or disposal laws.

 **Battery Warning:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity.
- Do not short-circuit the battery supply terminals.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- Alkaline batteries are recommended. Use only the specified voltage.
- Keep these instructions for future reference.

 **Rechargeable Battery Warning:**

 
- This product contains batteries that non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult Supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged. (Transmitter only).
- Keep these instructions for future reference.

Care and Maintenance:

- Always remove batteries from the product when it is not being used for a long period of time. (Transmitter only)
- Wipe the product gently with a clean cloth.
- Keep the product away from direct heat.
- Do not submerge the product into water that can damage the electronic assemblies.




GO FORWARD

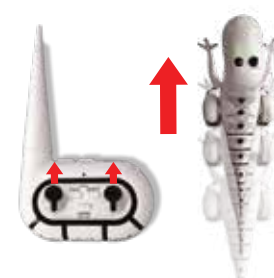


PUSH AND HOLD BOTH JOYSTICKS UP

 GO BACKWARD

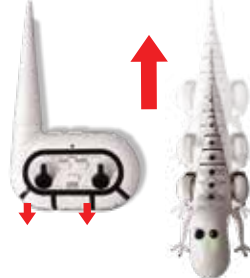


PUSH AND HOLD BOTH JOYSTICKS DOWN

 SPIN CLOCKWISE

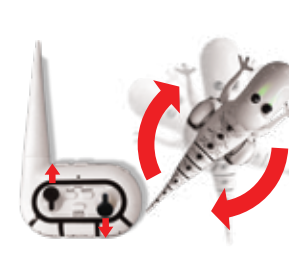

PUSH AND HOLD THE LEFT JOYSTICK UP AND RIGHT JOYSTICK DOWN

 SPIN COUNTERCLOCKWISE

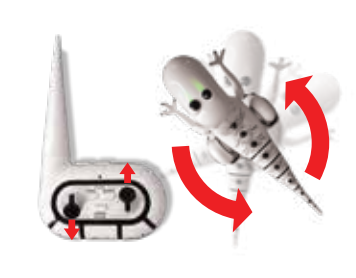


PUSH AND HOLD THE LEFT JOYSTICK DOWN AND RIGHT JOYSTICK UP

SIT



TAP BOTH JOYSTICKS UP TO SIT. HE MAY WONDER IF YOU THINK HE'S A DOG!

 ATTACK

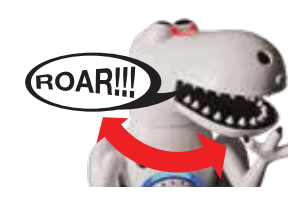

PRESS THE ATTACK BUTTON. HE TURNS HIS HEAD, ROARS, AND SPINS AROUND LOOKING TO MAKE TROUBLE! PET HIS NOSE ONCE TO SOOTHE THIS SAVAGE BEAST AND MAKE HIM HAPPY!

ROAR



 
TAP THE ROAR BUTTON. HE CURIOUSLY OPENS HIS MOUTH. HOLD THE ROAR BUTTON. NOW HE'S REALLY UPSET. HE TURNS HIS HEAD AND ROARS!

HUNT



PRESS THE HUNT BUTTON. HE GOES AROUND LOOKING FOR HIS PREY. WHEN HE FINDS SOMETHING, HE ROARS!

STOMP

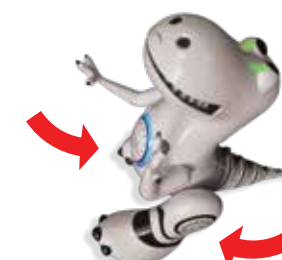

TAP THE LEFT JOYSTICK UP AND RIGHT JOYSTICK DOWN OR THE RIGHT JOYSTICK UP AND LEFT JOYSTICK DOWN. NOW YOU'VE DONE IT! HE KICKS HIS LEGS BACK AND FORTH IN A PREHISTORIC HIGH TECH RAGE!

GUARD



PRESS THE GUARD BUTTON OR PET HIS NOSE TWICE. HE SPINS AND LOOKS AROUND FOR SOMETHING TO ATTACK!

COME



FACE THE REMOTE CONTROLLER TO THE ROBOTOSAUR AND HOLD THE COME BUTTON. HE WILL FOLLOW YOU AROUND! PRAISE HIM BY PETTING HIS NOSE AND HE WILL WAG HIS TAIL IN JOY!

SNORE



 
- YOU WILL KNOW ROBOTOSAUR IS SNORING BECAUSE HIS EYE COLOR TURNS BLUE AND HE MAKES A YAWNING AND SNORING SOUND. ANY OPERATION FROM REMOTE WILL WAKE HIM UP.
- IF HE SNORES FOR A LONG TIME (ABOUT 2.5 MINUTES), HE WILL GO INTO SLEEP MODE. TOUCH HIS NOSE TO WAKE HIM, BUT BEWARE THAT SLEEPING CAN TURN HIS SNORE INTO A ROAR!

RECHARGE



WHEN THE BLUE LED RING ON BELLY IS FLASHING (INSTANT IN/OUT), IT INDICATE LOW POWER AND NEED TO BE CHARGED

MOOD

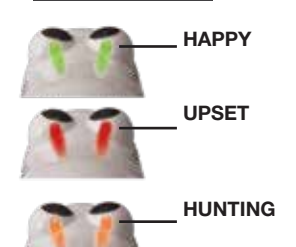

HE CAN BE VERY MOODY. HIS EYES WILL ALWAYS TELL YOU WHAT'S ON HIS MIND!

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

Distributed by and © 2020 ThreeSixty Sourcing Ltd. All rights reserved.

For US only: Distributed by and © 2020 MerchSource, LLC. Irvine, CA, 92618. All rights reserved. Tel: 1-800-374-2744.

EU: Hereby, ThreeSixty Sourcing Ltd. declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.threesixty-group.com/doc

Frequency Range: 2.400 - 2.4835 GHz / Transmit Power: <10mW

Printed in China